




Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
30664254	1.0	

Roof spoiler with stop lamps

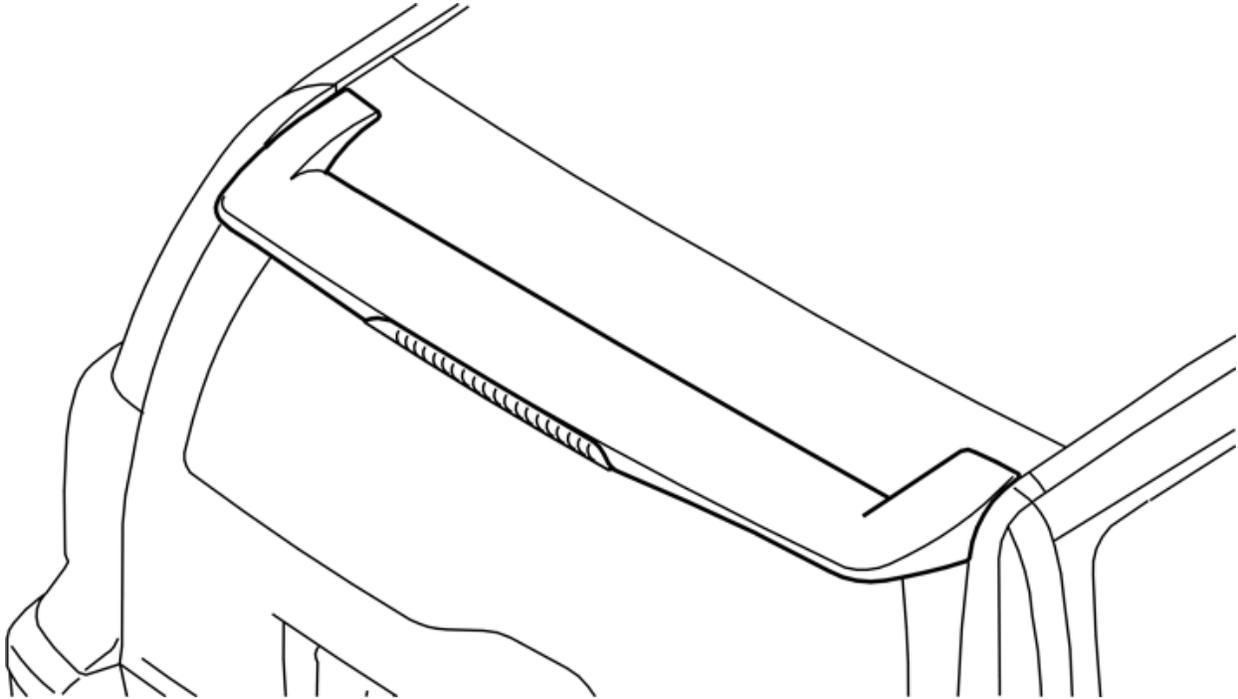


M8400560



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Equipment

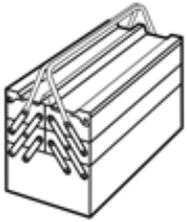

A0000162



A0000163



A0000161

Nm
lbf.ft



A0000180

48h




A0000214


2 h



A0000177

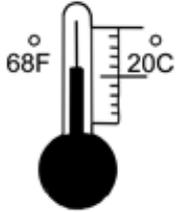

M0000232

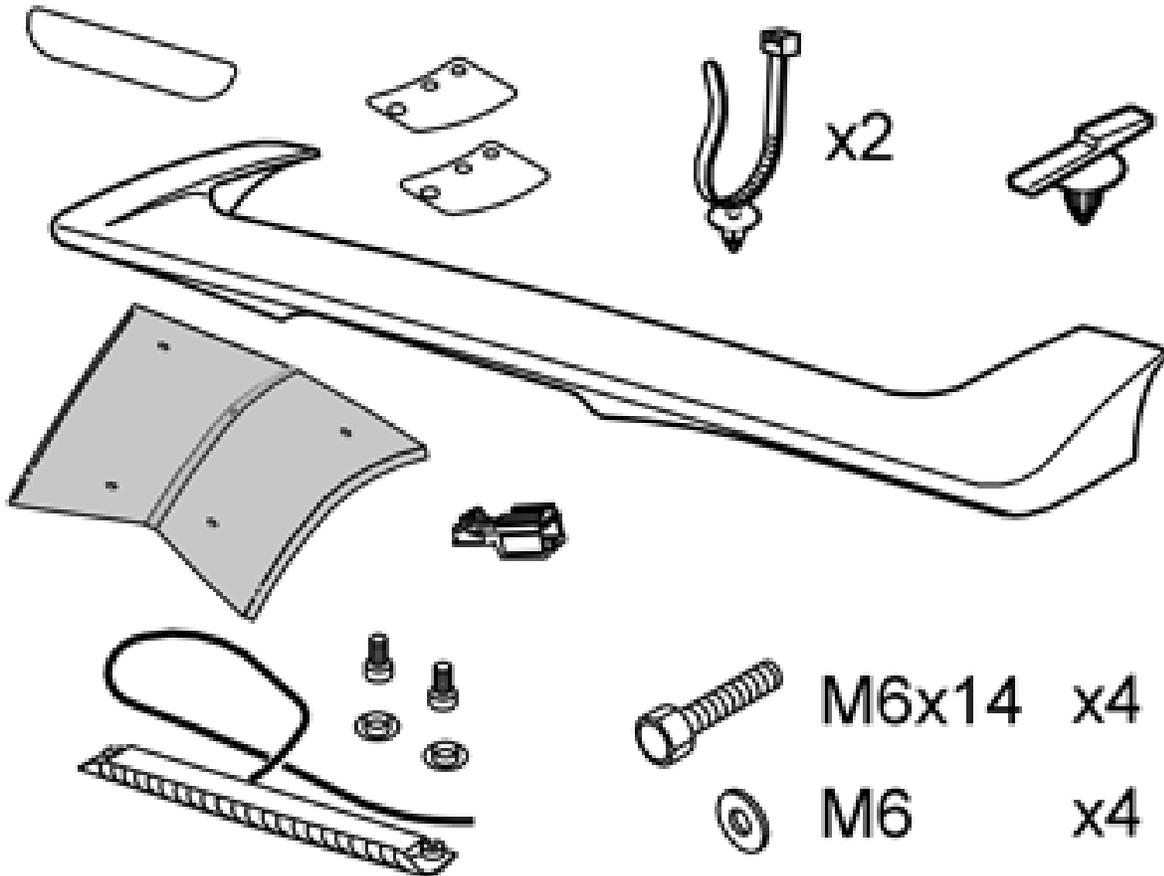

M8903187



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

INTRODUCTION

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.


In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

1

Applies to primed roof spoilers

Spray paint according to the Service Manual "Touch up spraying", section 8 (80).

2

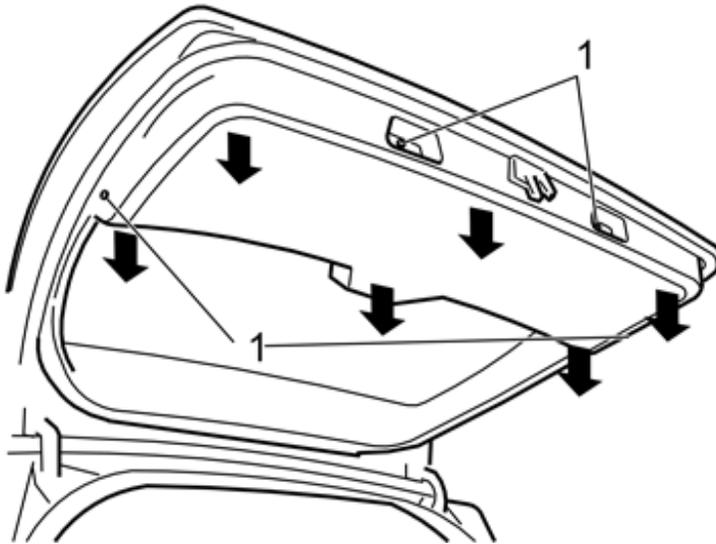


M8301671

Open the tailgate

Remove the four screws (1) from the lower section of the panel on the tailgate

Grasp the edges of the panel. Carefully pull off the panel. The panel is secured by eight clips.

3

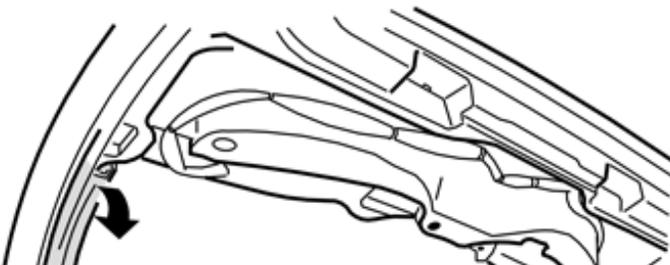

© Volvo Car Corporation

Pull down the sides of the panel around the tailgate window to release it from the two clips

Grasp the upper section of the panel. Carefully pull the upper section of the panel to release the clips


Place the panel to one side.

Roof spoiler with stop lamps- 30664254 - V1.0




Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

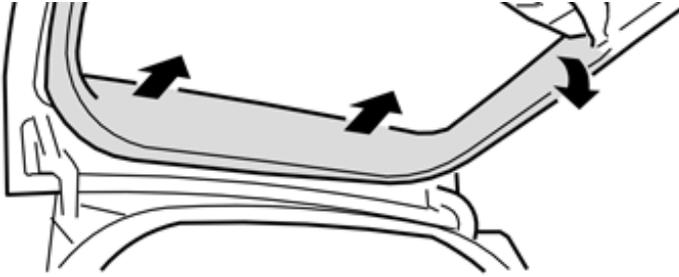

M8301672

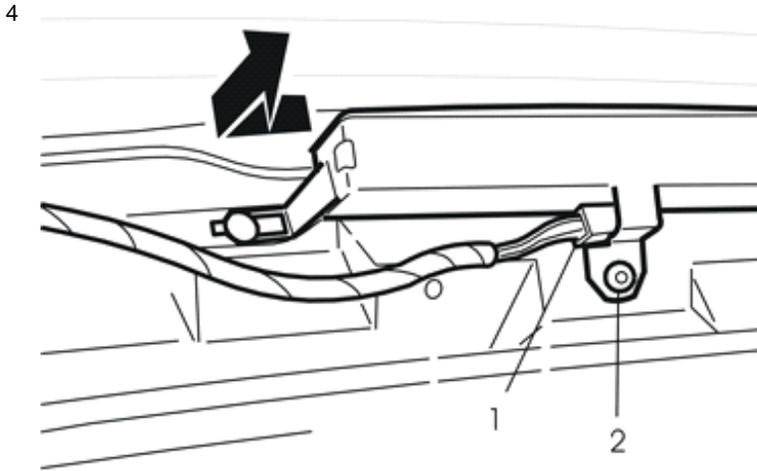


M3903031

Remove the connector (1) from the brake lamp

Press the centre of the clip (2) until a click is heard

Remove the clip

Slide the brake lamp to the left to release it from the guide holes.

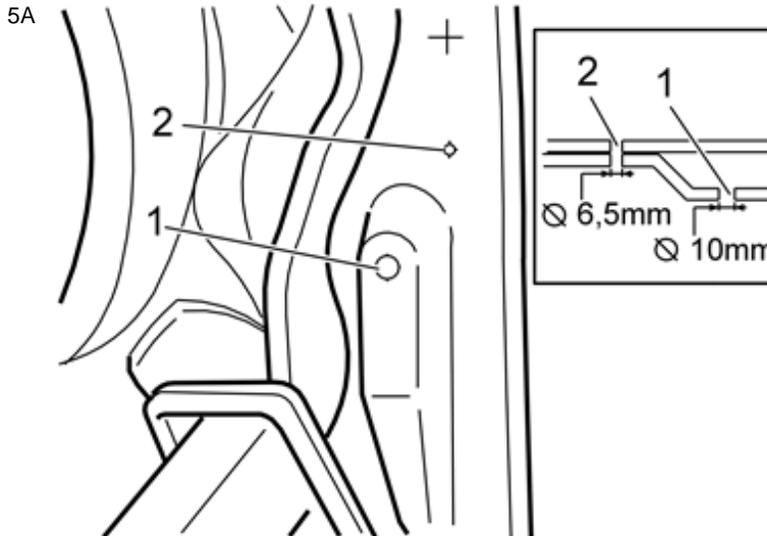

M8400945

Pre-drilling

Punch and drill the hole (1) following the existing marking. Use a 3 mm (1/8") diameter drill bit.

Note!


Drill only through the first layer of plastic. Drill at right angles to the surface. Use a drill stop.

Repeat the operation on the other side of the tailgate

Close the boot lid

Mark the hole (2) so that it can be drilled for the cable for the spoiler mounted brake lamp. See illustration B

Punch and drill the hole (2) on the right-hand side following the existing marking. Use a 3 mm (1/8") drill bit. Drill at right-angles to the surface. Drill through both plastic layers. The hole is for the cable lead-in.

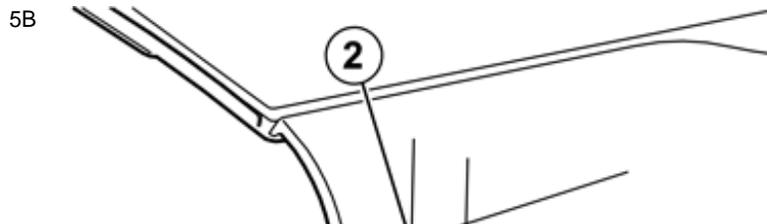


Hole enlarging



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

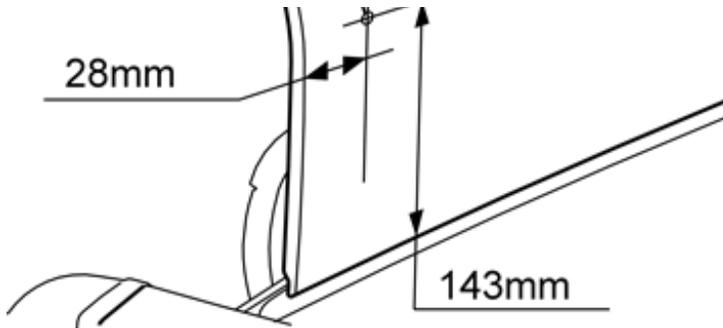

M8400979

Open the tailgate

Drill out the hole (1) using a 10 mm diameter (25/64") drill bit on the left and right-hand sides.


Note!

Drill only through the first layer of plastic. Drill at right angles to the surface. Use a drill stop.

Close the boot lid

Drill out the hole (2) on the right-hand side. Use a 6.5 mm (17/64") diameter bit. Drill at right angles to the surface. Drill through both plastic layers.


6

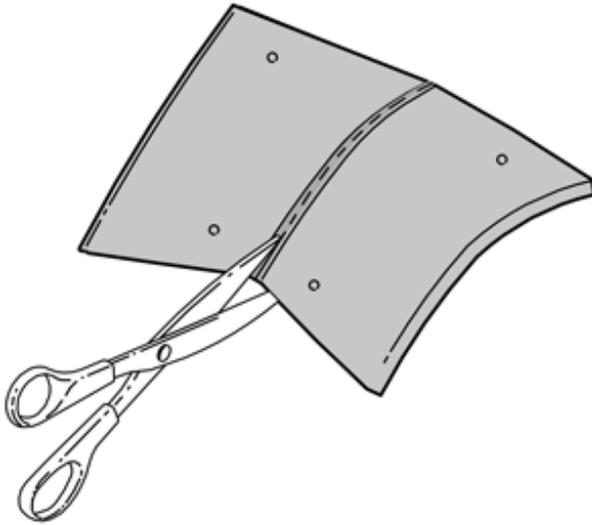

M8400864

Take the left and right drilling templates from the kit. Use scissors to cut the templates apart as illustrated.

7

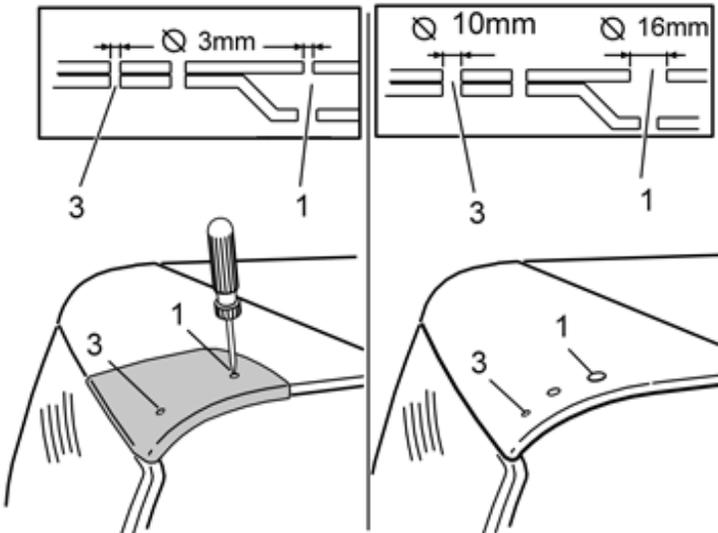

M8400946

Pre-drilling

Place the left template on the upper left corner of the tailgate. See the illustration

Mark both holes through the template and inside the tailgate using an awl

Drill the markings at right angles to the surface. Use a 3 mm (1/8") diameter drill bit.

Note!

Only drill through the first plastic layer at the hole (1). Use a drill stop. Drill through both layers at the hole (3).

Take the right-hand template and do the same on the other side

Roof spoiler with stop lamps- 30664254 - V1.0



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

of the tailgate.

Hole enlarging

Drill the hole (1) at right angles to the surface. Use a 16 mm (5/8") diameter hole saw. Only drill through the first plastic layer. Use a drill stop

Drill the hole (3). Use a 10 mm (25/64") diameter hole saw at right angles to the surface. Drill through both plastic layers


Take the right-hand template and do the same on the other side of the tailgate.

8

Check that the roof spoiler aligns with the drilled holes. Ensure that the screws (from the kit) align with the nuts for the roof spoiler

If necessary: adjust the holes using a round file.

9

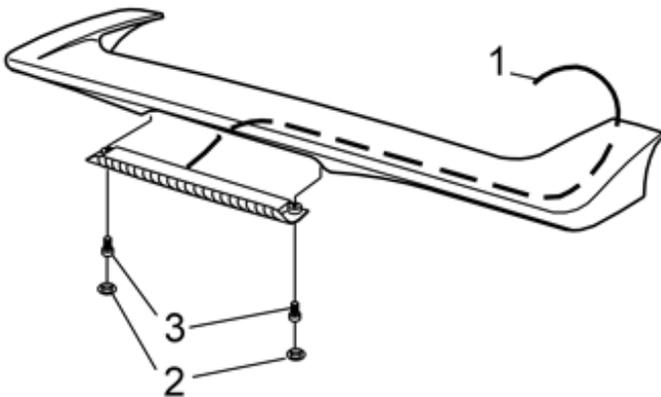

Route the cable (1) through the spoiler. Drill at the brake lamp. Thread a piece of wire or a thin plastic rod into the hole for the cable lead-in. Then tape the terminal and the cable to the wire and pull it out through the hole.

Note!

Do not damage the pins.


Remove the covers (2)

Install the brake lamp. Use the two screws (3). Tighten to a maximum of 2.5 Nm (2 lbf. ft.). Greater torque may damage the threaded joint

Reinstall the covers.

M8400948

10

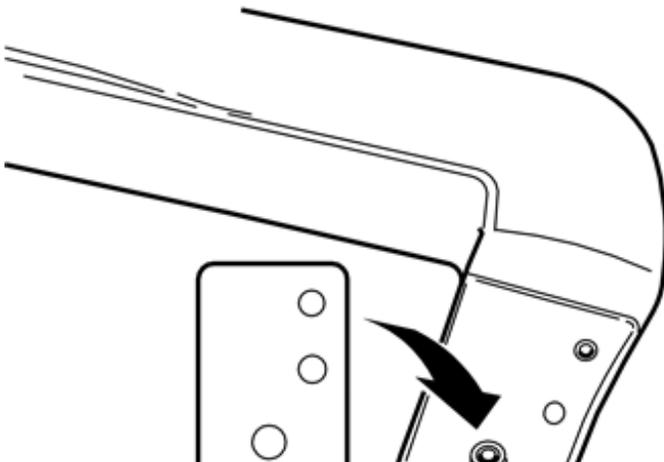

Position the tape on the mating surfaces. Press the tape into place. Leave the thick outer protective film in place.




Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden



M8400944

11

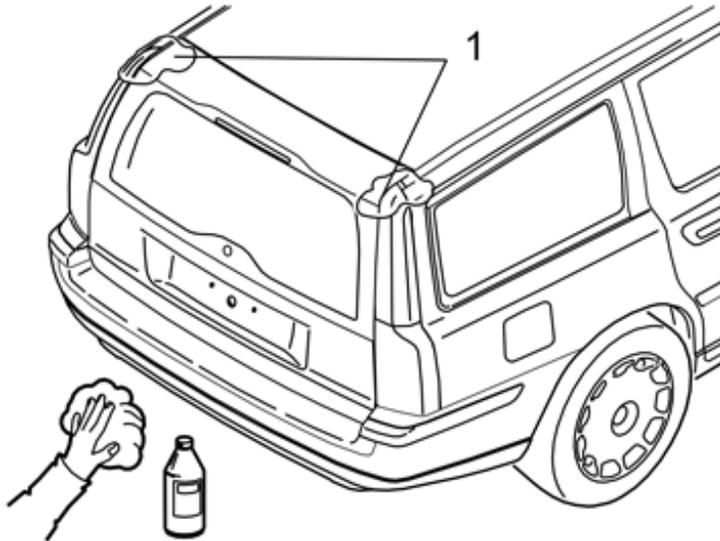


M8000357

Clean the surfaces (1) where the roof spoiler will be positioned. Use a mixture of 30% windscreen washer fluid and 70% water

Wipe dry.

12A

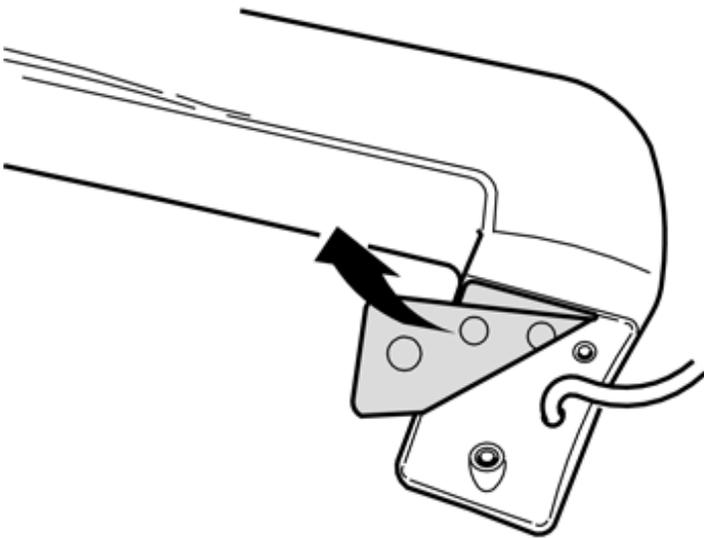

M8400949

12B



© Volvo Car Corporation

Note!

To ensure the best results, it is recommended that two people press the roof spoiler onto the tailgate.

Illustration A

Remove the protective film from the tape.

Illustration B

Insert and pull the brake lamp cable through the hole in the tailgate

Press the spoiler into place on the tailgate.

Illustration C



Install the four screws (from the kit). Tighten the spoiler

Tighten the screws. Tighten to a maximum of 5 ± 1 Nm (3.7 ± 0.7 lbf. ft.). A greater torque may damage the threaded joint.



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

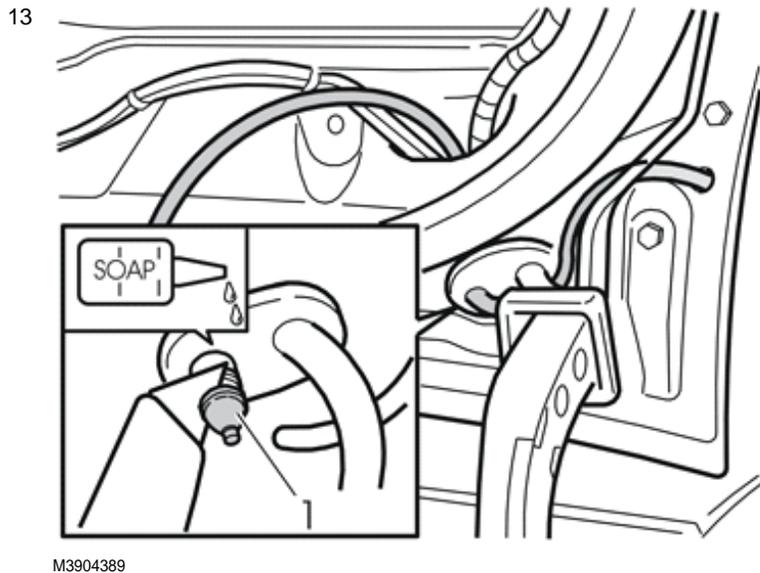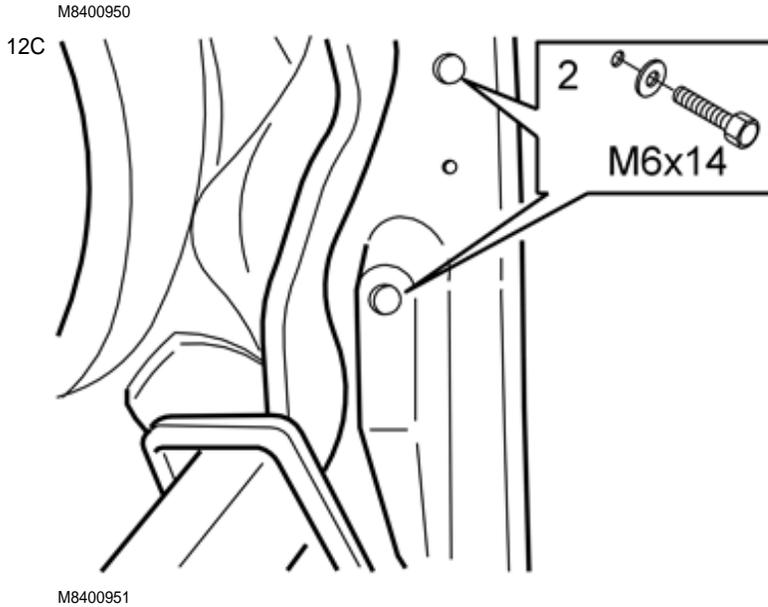


Cut the rubber nipple (1) off the rubber grommet for the brake lamp. Do not damage the existing washer hose

Thread the brake cable from the roof spoiler between the hinges and tailgate behind the existing washer hose. Thread the brake cable through the hole in the rubber grommet and out of the hole in the corner of the tailgate.

Hint

Use soap to facilitate the lead-in.

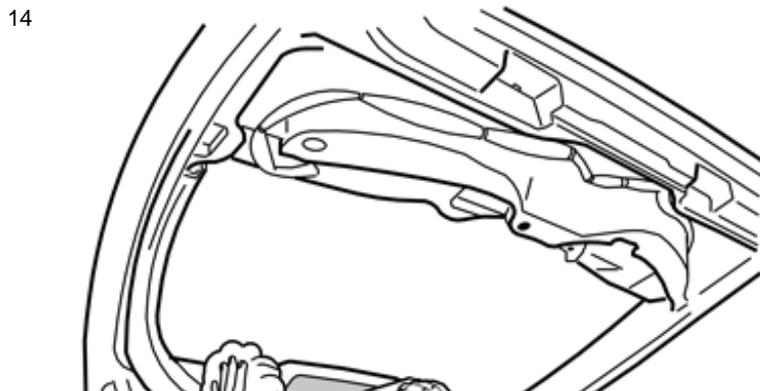

Clean the rear windscreen by the brake lamp socket

Wet the window. Soak the tape which will cover the socket. Use a mixture of 30% windscreen washer fluid and 70% water

Apply the tape over the socket. Press out the water and air bubbles. Use a plastic card or similar

Reinstall the brake lamp.




Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden



M8301675

15

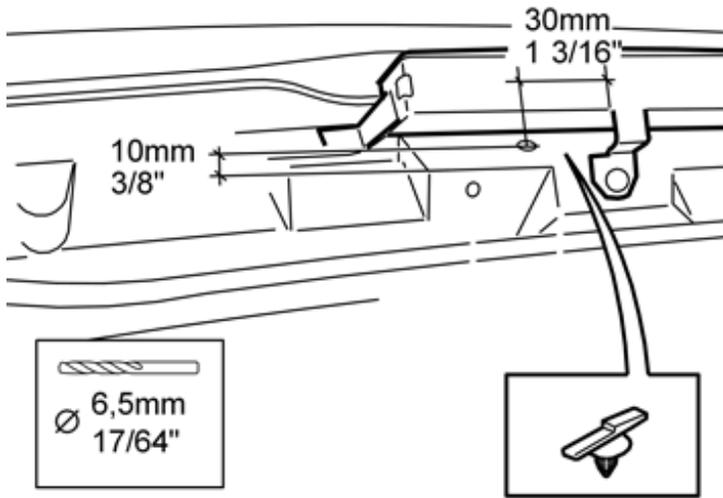

M8400952

Applies to vehicles manufactured before year 3, week 10

Drill holes in the tailgate for the attachment of the connector


Drill out the holes. Use a 6.5 mm (17/64") diameter drill bit

Press in the holder together with the clip.

Applies to vehicles manufactured after year 3, week 10

Press in the holder together with the clip.

16

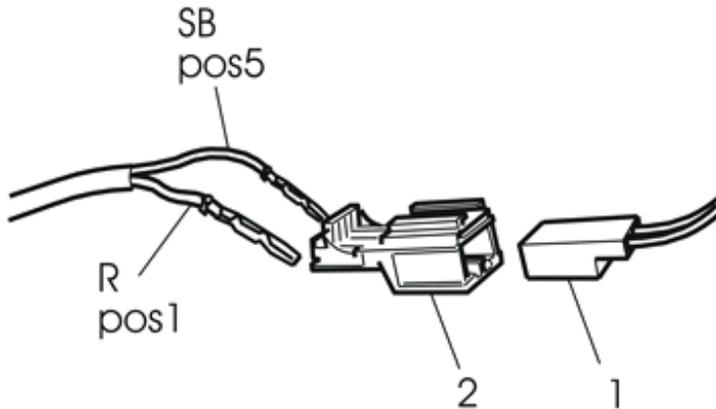

M3903033


Take the connector (2) from the kit. Open the catch

Connect the cable harness for the spoiler to the connector.
Connect the red (R) cable to position 1. Connect the black (SB) cable to position 5

Press the catch together

Connect the existing brake lamp cable (1) to the new connector as illustrated.

17

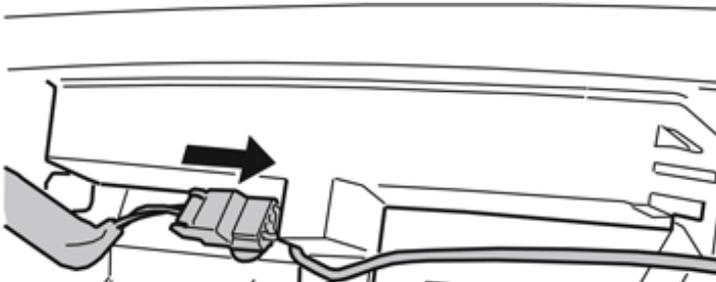


© Volvo Car Corporation

Press the connector for the spoiler cable into place in the holder.




Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

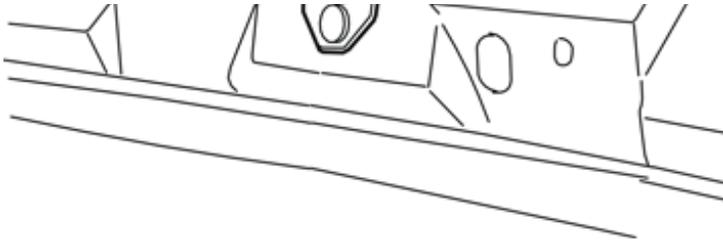

M3904391

18

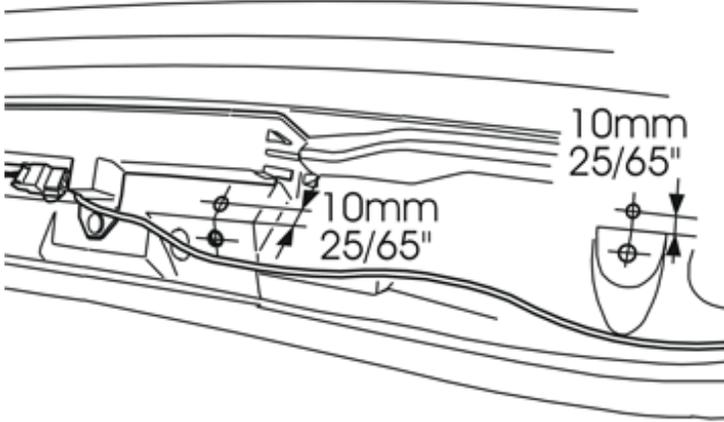

M3904393

Applies to vehicles manufactured before year 3, week 10


Drill a hole in the tailgate to secure the cable for the spoiler mounted brake lamp. See the illustration. Use a 6.5 mm (17/64") diameter drill bit

Remove any swarf.

Note!

Only drill through the first plastic layer. Use a drill stop.

19

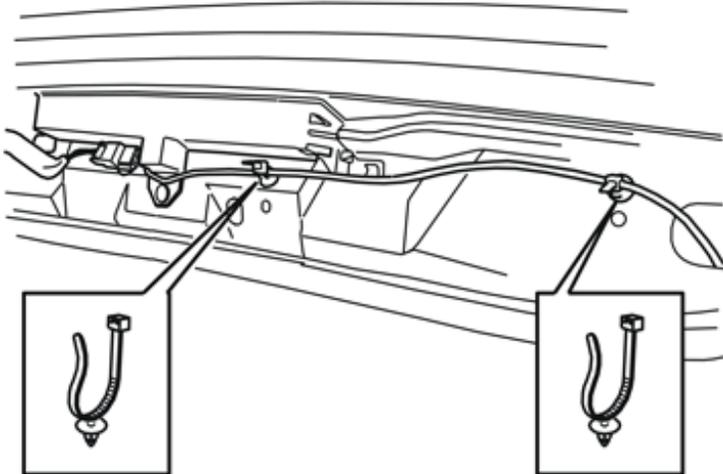

M3904390

Take the two tie straps and clips from the kit and press them into place in the drilled holes

Secure the cables using the tie straps.

20

Check the function of the brake lamp

Reinstall the panels on the tailgate

Post-tighten the screws for the spoiler to the correct torque. See point 12C.



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden
